

ESA LIMITED WARRANTY



vehicle portable DVD player travel case



User's Guide

Please read before use and retain for your records

Please read the instructions before using this product. After reading this manual, if you have any questions, please call us @1-800-591-1879.

INTRODUCTION

Congratulations on the purchase of your ESA portable travel case. The dual-duty case makes viewing, carrying and storing your portable DVD player and accessories convenient. This unique system is designed for use in almost any car, and easily mounts your portable DVD player to the ideal viewing height for rear-seat passengers.

Features

- * Supports up to a 9" screen portable DVD player.
- * Easily mounts between or behind the front seats of your vehicle and adjusts for proper viewing height.
- * Holds your DVD player securely when watching DVDs on the road.
- * Accessory panel holds the next 4 DVDs and the remote for easy access.
- * Mounting system quickly detaches and converts to a portable carrying and storage case.
- * Stores up to 20 DVD discs (16 in carrying case, 4 in the display platform).
- * Designed with extra padding and made of rugged outer materials.

NOTE

Please read this manual before you start and follow the instructions in this manual carefully to ensure proper use.

WARNING!

Position your DVD player so the driver cannot see the screen. Use of this product by the operator of an automobile may result in distraction or inattention that could cause accidents and/or serious injury and may be in violation of certain state laws (which vary from state to state). In addition, use of any A/V equipment in the front seat of an automobile is illegal in several states.

UNPACKING

Please make sure your box contains the following items:

- * Carrying Case
 - * Display Platform
 - * Four Mounting Straps
 - * Padded, Detachable Shoulder Strap
 - * User's Guide and Warranty
- If any item is damaged or missing, please inform your dealer.

Step 1 USING YOUR TRAVEL CASE

The ESA portable DVD travel case consists of two separate cases: the display platform and the carrying case. Each is designed with ample storage compartments for easy access and storage during travel.

USE TO VIEW MOVIES

Remove the display platform from the large zippered compartment of the carrying case.

An accessory panel folds open to provide convenient storage for your remote control and four additional DVDs, so the next movie is always ready on the road.

Unsnap the accessory panel of the display platform.



Use for DVD and remote control storage.



Follow the instructions in the next section to set up your display panel for viewing in your car.

USE TO STORE YOUR DVD PLAYER AND ACCESSORIES

When storing your portable DVD player, use the display platform as additional protection and slip it into the carrying case. The carrying case is designed to store your DVD player plus all the accessories you will need to set the system up in any car.

The carrying case has a roomy mesh pouch on the front to hold anything you may need without opening the case. The front compartment contains a panel designed to store 16 DVD discs and mesh pockets designed to hold your headphones and remote control. The main compartment will store the display panel and has storage space for other accessories like the mounting straps, cables, batteries, and power cords.

Both pieces are designed with extra padding and are made of durable materials for maximum protection.

Step 2 SETTING UP THE DISPLAY PLATFORM

Follow these steps to ensure secure placement of your DVD player on the display platform.

1. Unzip and open the display platform as shown.



2. Turn the display platform over and unfasten the two snaps as shown.



3. Fold the display platform in half with the interior facing outward and fasten the snaps to hold it in place.



4. Turn the display platform over and loosen the restraining strap.



5. Place your portable DVD player in the display platform so the front of the DVD player rests against the metal retaining bracket.



Notes

- * If you wish to have the accessory panel available (as shown in option C), unfasten and open now.
- * Please read through the mounting options before you continue.

Step 3 MOUNTING THE DISPLAY CASE

IMPORTANT!

- * Before you begin, please carefully study all three mounting options to determine which works best for your needs.
- * Keep this manual for future reference. You may decide to use a different option when you switch vehicles.
- * Adjust the seats before mounting the display platform to avoid possible damage to the display platform, mounting straps, or seats.
- * Make sure the DVD player is securely fastened to the display platform, and facing the rear for rear-passenger viewing only.
- * To have the accessory panel available (as shown in option C), unfasten and open the panel before mounting the display platform.

Option A MOUNTING ON THE CENTER CONSOLE

Use two of the supplied mounting straps and follow these instructions carefully to secure the display platform on the center console as shown.



1. Place the display platform on your car's center console with the DVD player facing the rear passenger seats.
2. Sit in the rear passenger seat and wrap one mounting strap around one of the front seats.
3. Position each end of the strap so the metal clasps are near the center console.
4. Sit behind the other front seat and wrap the second mounting strap around it.
5. Adjust both straps so they are level with the center console.
6. Attach each side of one mounting strap to the display platform by hooking the two metal clasps to the front (closest to you) metal D-ring on the display platform.
7. Do the same with the second mounting strap. (shown below)



8. Adjust both mounting straps until the display platform is centered on the console, and tighten until the display platform is securely positioned.

Option B MOUNTING ON THE BACK OF THE FRONT SEAT

Use two of the supplied mounting straps and follow these instructions carefully to secure the display platform to the back of one front seat as shown.



ATTACH THE FIRST MOUNTING STRAP

1. Sit in the rear passenger seat and wrap one mounting strap around the middle of the front seat.
2. Position each end of the strap so the metal clasps are near the center of the two seats.
3. Wrap another mounting strap around the shoulder area of the same seat.
4. Position each end of the strap so the metal clasps are near the center of the two seats.
5. Sit behind the other front seat and repeat steps 1-4 with the last two mounting straps.



5. Tighten the strap to hold the display platform in place.

ATTACH THE SECOND MOUNTING STRAP

1. Wrap the second mounting strap around the top of the same front seat below the headrest.
2. Position each end of the strap so the metal clasps are facing you.
3. Attach each end of the mounting strap to the display platform by hooking the metal clasps to the front (closest to you) D-rings on each side of the display platform as shown.



4. Adjust the mounting straps to position the the DVD player to the desired height. Tighten both mounting straps until the display platform is securely resting against the seat.

Option C MOUNTING BETWEEN TWO SEATS

Use all four of the supplied mounting straps and follow these instructions carefully to secure the display platform between the front seats as shown.



POSITION THE MOUNTING STRAPS

1. Sit in the rear passenger seat and wrap one mounting strap around the middle of one of the front seats.
2. Position each end of the strap so the metal clasps are near the center of the two seats.
3. Wrap another mounting strap around the shoulder area of the same seat.
4. Position each end of the strap so the metal clasps are near the center of the two seats.
5. Sit behind the other front seat and repeat steps 1-4 with the last two mounting straps.

ATTACH THE MOUNTING STRAPS

1. With the DVD player facing you, hold the display platform between the two front seats.
2. Attach the mounting straps around the middle of both front seats. Hook the ends of each strap to the front and rear D-rings on each side of display platform. You will attach four metal clasps to four metal D-rings as shown.



3. Attach the mounting straps around the shoulder area of both front seats. Hook the ends of each strap to the front and rear D-rings on each side of display platform. You now have attached four more metal clasps to four metal D-rings, making a total of eight as shown.



4. Adjust the mounting straps to position the the DVD player to the desired height. Tighten all four mounting straps until the display platform is securely resting between the two seats.