ARCTIC FRONT 45X JOBSITE GUIDELINES: EXTERIOR GLAZE

ASSEMBLY INSTALLATION GLAZING **GLASS THICKNESS** GLAZING PREPARATION Clean before sealing NOTE: DO NOT use End Dams on ends that butt against Door Jamb Correct combination of Gaskets and Adaptors for each Glass Thickness. 12 FT (3.6 m) Maximum Length between Splice. Determine correct combination of Gaskets and Glazing Adaptors for each Glass Thickness using illustrations on the left. Install using Method A or Method B. NOTE: 45XHA, 45XHB, 45XHC, and 45XVA use Adaptors shown on left of each Glass Thickness while 45XVE Shallow Pocket use Adaptors shown on the right. 45XHH 45XVQ NOTE: Gap is tooled and sealed after FRAME INSTALLATION. EXTRUDED ALUMINUM SPLICE #14 x 1" HHSTS Cut Vertical Gaskets D.L.O. plus 1" (25 mm) plus 3/8" (10 mm) per foot. **EXTERIOR GLAZED** (1) Apply 3/4" Bond Breaker Tape to center bottom side of Sleeve. Vertical Gaskets run through. SCREW RACE ASSEMBLY Cut Horizontal Gaskets D.L.O. plus 3/8" (10 mm) per foot. (2) Apply silicone and tool full length of Splice. 45A1133 Seal ends of Horizontal Members Horizontal Gaskets are mitered at corners and sealed as shown and inside Glazing Reglets (3) Place Splice Sleeve. to Vertical Gaskets during installation. where they will meet Vertical Members. Apply Bond Breaker Tape to other side. PREPARE GLAZING ADAPTORS: (5) Ensure Splice Sleeve is level. ິກ <mark>ໄສ 45XHA</mark> Cut Vertical Adaptors D.L.O. plus 7/8" (22 mm). (1) Hold End Dam against Sub Sill and drill 5/32" holes. (6) Seal over Tape, extending 1/4" (6 mm) on either side. 45AFL66 Vertical Adaptors run through. (2) Apply sealant to End Dam and ends of Sub Sill. Cut Horizontal Adaptors D.L.O. minus 1/16" (2 mm). Seal entire perimeter of Sleeve. Glass Size = Daylight Opening 45AFL66 Horizontal Adaptors are sealed to Vertical Adaptors during installation plus 7/8" (22 mm). 4 Use #8 x 7/8" PHP SMS screws to secure. Trim excess length.

5/16" Weep Holes located at mid-lite NOTE: Clean Glazing Pockets of debris before 45XHK 45XVN (5) Seal and tool joint and seal over screw heads. glazing to prevent blockage of weeps or drains. **GLAZING ADAPTOR INSTALLATION** (1) Apply continuous bead of sealant in Interior Glazing Reglets. Clean before sealing 45AFL66 (2) Install Interior Vertical Adaptor and then Interior Horizontal Adaptor. Continuous Seal in [′] 45A1133 [′] (3) Seal Adaptor Glazing Reglets at corner. (4) Install Interior Vertical Gasket and then Interior Horizontal Gasket 45XHK 45XVN **EXTERIOR GLAZED** SHEAR BLOCK ASSEMBLY (5) Seal Gaskets at corner, 2" in each direction. 45A1133 Seal ends of Horizontal Members as shown and inside (6) Follow Steps 4 - 12 below to set Glass Glazing Reglets where they will meet Vertical Members. 45A1133 (2) Attach Shear Blocks using 45AFS9 Screws and install 45ATFS24 Roll Pins. SUB SILL INSTALLATION Seal over fastener heads (3) Fit Horizontal Members over Shear Blocks. SEnd Dam and Wall. DO NOT block Weep Holes (4) Secure 45AFP60 Shear Block with 45ATFS7 Screw. 45AFL66 (5) Secure 45AC119 Shear Blocks with 45ATFS6 Screws. NOTE: Only pin Sub Sill at one point per cut length. 45AFL66 Ensure Sub Sill is level. DO NOT tilt towards interior. 45AFL66 EXTERIOR GLAZING NOTE: 1/2" (13 mm) Glass with 45AFL66 Gaskets and 45XVP Adaptor Exterior Installation shown above (1) Seal Interior Glazing Reglets at corner. NOTE: Clean Glazing Pockets of debris before 45XHJ 45XVP glazing to prevent blockage of weeps or drains. (2) Install Interior Vertical Gasket and then Interior Horizontal Gasket. 45A1133 / (3) Seal Gaskets at corner, 2" in each direction. Shim at Anchor Points. Position (4) Inset Glass into Deep Pocket. fasteners in center of elongated holes. 45A1133 (5) Swing Glass to plane. NOTE: Refer to Shop Drawings for (6) Slide Glass into Shallow Pocket. fastener size and frequency. (7) Push Glass up into Upper Glazing Pocket. 45A3129 (8) Wet top of two Setting Blocks with soapy water and install. RAME INSTALLATION 45A3129 (9) Push Glass tight against Interior Gaskets. (10) Snap in Glass Stop. Seal Mitered End (11) Install "W" Edge Block in Deep Pocket. **3** 45XHJ 45XVP **2** (12) Install Exterior Gaskets using the same 45A1134 procedure as Step 2 above. 11/16" (18 mm) (3) Embed 45AFP2 Water Diverter in Sealant on both ends of 45XVA Intermediate Horizontal. METER SEALING (14) Seal around edges of Water Diverter. Backer Rod and seal perimeter with Cat. No. 795 Silicone Sealant (15) Repeat steps 1 through 12 to install Top Lite. NOTE: The quality of Perimeter Seals may be improved by using 45XFA PVC Filler Plate between 45AFP58 and 45AFP59 Anchor Plates. (1) Butter End Dam. 45A1134 2) Apply continous sealant on Sub Sill front and back legs. NOTE: Screws are included with Shear Blocks. 45ATFS24 Roll Pin is packaged separately. (3) Set front of frame in Sub Sill. 45A1134 ANCHOR INSTALLATION (4) Tilt frame back into place (1) Install 45AFP58 Head Anchors on each end of Head, (5) Clean excess sealant. 4" away from each Mullion and at all Anchor Points on Jamb. 45AFL66 (6) Push frame against wall. Shim when necessary. (2) Drill through Anchors, Head, and Jamb at all Anchor Points. (7) Shim and fasten Head at Head Anchors. 7/8" (22 mm) Refer to Shop Drawings for Anchor size and frequency. 45AFL66 (8) Seal 4" (102 mm) Interior Snap Joint on 45XVE (3) Install 45XFA PVC Filler between Anchors at Head (required) and at Jamb (optional) to improve perimeter seals. (9) Repeat Steps 2 through 7 above to snap next frame into place. NOTE: Crtitical Sea 4" (102 mm) 45AFL66 MAXIMUM 45A1133 45A1133 1" (25 mm) 45A1133 DOOR FRAME INSTALLATION 45A1134 (1) Leave front of Door Jamb clear of sealant for drainage. 1-1/16" (27 mm) (2) Create bed of sealant for Sub Sill. 45A1133 Seal minimum of 1" above back leg of Sub Sill. MORE INFORMATION 45A1134 (3) Refer to SUB SILL INSTALLATION to install Sub Sill. Refer to the Installation Manual for more information on: (4) Apply continous sealant along 1-1/8" (29 mm) Frame Fabrication: Exterior and Interior

Sub Sill front and back legs.

(5) Continue with FRAME INSTALLATION.

SPLICE SEALING

Seal and tool Gap at

Interior Splice Joint.

Interior Glazed Installation

Contact Technical Sales at (800) 582-7501

for Assistance and Replacement Parts.

45A1134

NOTE: 13/16" (21 mm) Glass

is not be used with this system

US ALUMINUM

Follow link above for

ArcticFront 45X Installation Manual.

Follow link above fo

ArcticFront Door Installation Manual