


COMPACT MULTI FUNCTION OVEN

Model No: KOC-1C4K



Please keep this guide next to your oven for easy reference.

QUICK REFERENCE: CONTROL PANEL

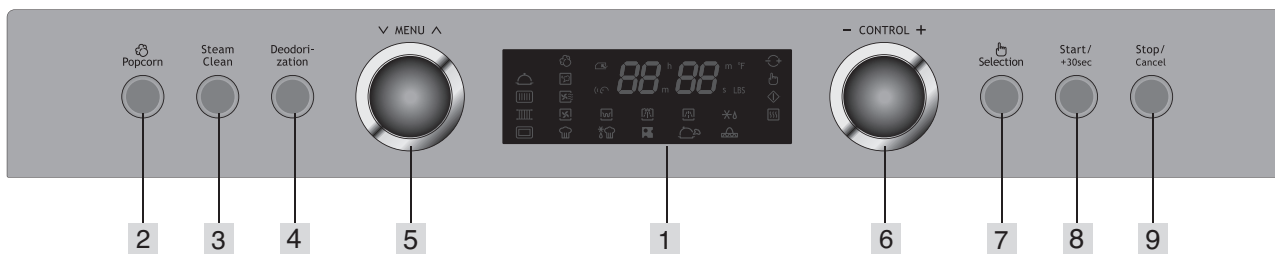

- 1 **Display Window:** Displays information such as cooking time, temperature, quantity, menu and mode icons.
- 2 **Popcorn Button:** Press and set time to pop either 3.0 or 3.5 ounces of popcorn.
- 3 **Steam Clean Button:** With a glass of water inside the oven, press to steam clean the oven.
- 4 **Deodorization Button:** Press to begin function to remove unpleasant odors after cooking.
- 5 **MENU Dial:** Turn to select cooking menus and functions.
- 6 **CONTROL Dial:** Turn to enter cooking time, quantity, weight, and temperature.
- 7 **Selection Button:** Press to confirm selection.
- 8 **Start/+30 Sec Button:** Press for Express Cook, 30 seconds at maximum microwave power. Continue pressing to add 30 seconds up to 5 minutes.
Press to start cooking after selection is confirmed.
- 9 **Stop/Cancel Button:** Press to stop operation or clear settings.

QUICK REFERENCE: ICONS

Operating Control Icons blink to indicate which control must be used to continue.



Operating Mode Icons are lit during operation to indicate selected cooking or cleaning mode.



Accessory Icons are lit to indicate proper cooking accessories for selected operating mode.



Voice Guide Icon is lit when activated.

*Proofing, used to rise dough, is also referred to as fermentation.



VOICE GUIDE is a feature which verbally directs you through each step of operation. When muted, rely on the icons on the display screen as visual guides.

QUICK REFERENCE: PRESET COOKING MODES

When Voice Guide is activated, the menu items will be announced as listed below. They will be displayed as the corresponding menu item numbers.

For detailed cooking information, see the Owner's Manual.



AUTO COOK

AUTO COOK MENU CHART	
MENU NUMBER	MENU ITEM
01	ROAST PORK
02	ROAST BEEF
03	ROAST CHICKEN
04	BAKED FISH
05	FRESH VEGETABLES
05	CHICKEN PIECES



INSTANT COOK

INSTANT COOK MENU CHART	
MENU NUMBER	MENU ITEM
01	FROZEN HAMBURGER
02	SAUSAGE
03	BAKED POTATO
04	FROZEN PIZZA
05	FROZEN VEGETABLES




MEMORY COOK

See the Owner's Manual to change the factory presets.

MEMORY COOK FACTORY PRESETS		
NUMBER	COOKING TIME	MICROWAVE POWER LEVEL
1	0:40	P-HI (100%)
2	1:20	P-HI (100%)
3	2:00	P-HI (100%)

ACCESSORIES

 This is a commercial grade oven with rack holders on each side of the inside of the oven. With the long side parallel to the door slide the metal tray into one of the rack positions. Be sure the tray slides into the same position on each side of the oven so it is level.



METAL TRAY: Place food or cookware on tray and slide into either lower, middle or upper shelf.



GRILL RACK: Place food or cookware on rack. Always place on the metal tray.

IMPORTANT: Place the metal tray in one of the three shelf positions when cooking. Do NOT place anything directly on the bottom of the oven during operation.